


Capacitor Replacement Visit www.tal-usa.com/replacement for installation videos

www.tal-usa.com 1-877-902-5588 7:30am-3:30pm PT


3-in-1 Capacitor

- 1. Turn off power at the breaker.
- 2. Use a pointed tool to release the purple, grey, and brown wires from the speed switch.
- 3. Cut the red wire and grey wire from the capacitor.
- 4. The defective capacitor can now be removed.
- 5. Insert the purple, grey, and brown wires from the new capacitor into the speed switch.
- 6. Strip the ends of the grey and red wires.
- 7. Use wire nuts and electrical tape to connect the grey and red wires from the new capacitor to the stripped wires.

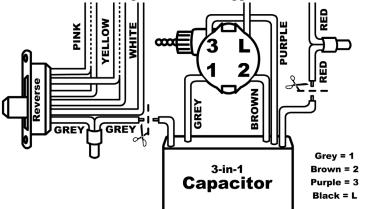

Starting Capacitor

- 1. Turn off power at the breaker.
- 2. Bring the fan motor down and remove the top housing or inspect the switch housing for the capacitor (varies by model).
- 3. Cut the red wire and white wire from the capacitor.
- 4. Remove any screws (if applicable) holding the capacitor in place.
- 5. The defective capacitor can now be removed.
- 6. Strip the ends of the red and white wires.
- 7. Use wire nuts and electrical tape to connect the red and white wires from the new capacitor to the stripped wires.

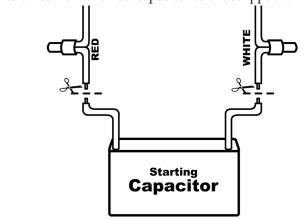

✓ Warning: Risk of Electric Shock. Damaged parts may discharge, handle with care or contact an electrician. ✓